


# The Proclaimer™

## Operating Instructions

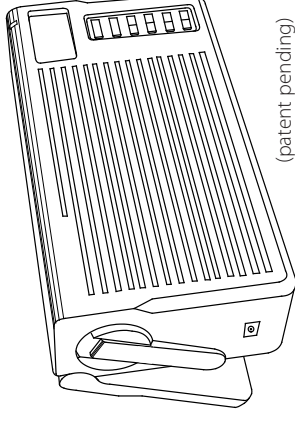

### **IMPORTANT – Please Read This Before Using the Proclaimer!** **Getting Started**

**Charge the battery pack before using the Proclaimer for the first time.** For best results, do not play the Proclaimer while it is charging.

The battery pack may be charged three (3) ways:

1. **AC/DC Power Supply (Accepts 100-240 VAC; 50/60 Hz)** – Plug the adapter into the Proclaimer, then connect to an external power source, 3 – 5½ hours for a complete charge.
2. **Solar Charging** – Peel off plastic film. Place the Proclaimer in full sunlight, with solar panel raised toward the sun, 7 – 8 hours for a complete charge.
3. **Hand Crank** – Crank the Proclaimer handle for 5 minutes (either direction) to condition the battery, and then crank an additional 5 minutes for each 20 – 25 minutes of play time at medium volume (level 17).

*Note: Hand crank not intended to fully charge the battery.*


### **Maintenance Charging**

**During regular use of the Proclaimer, the battery pack will need recharging.**

1. **AC/DC Power Supply** – Recharge using adapter about ½ hour for every hour of use.
2. **Solar Charging** – Recharge in full sun about 1 hour for every hour of use.
3. **Hand Crank** – Recharge by cranking (either direction) for 15 minutes for every hour of use.

# Controls

## The Proclaimer™

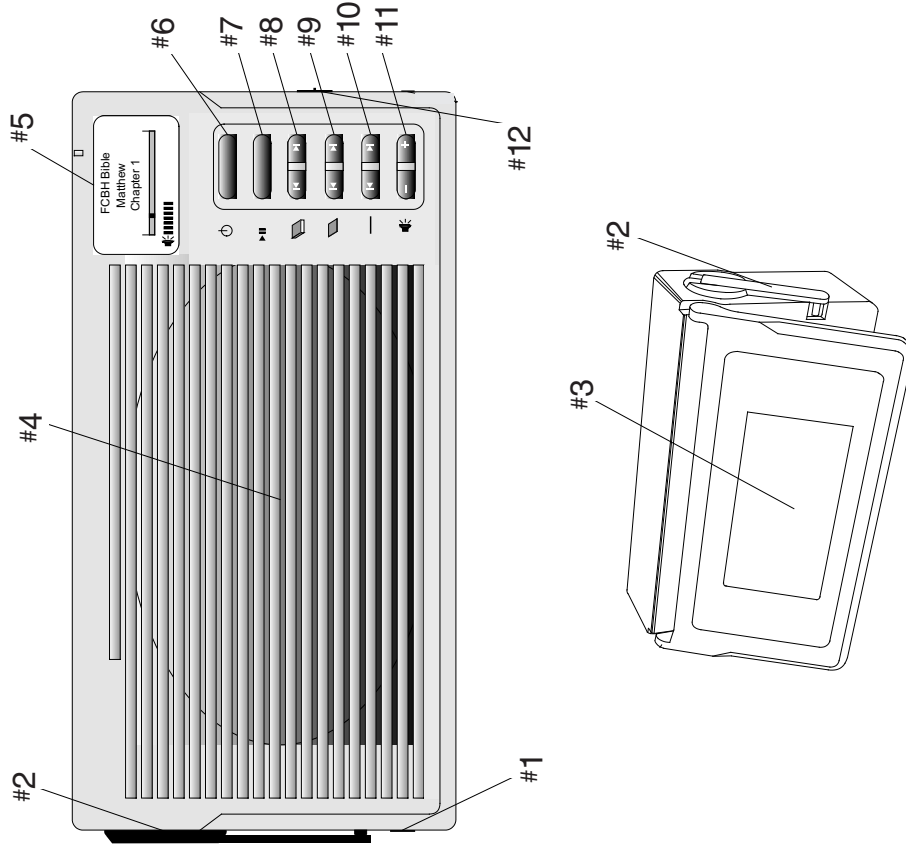

4. **Speaker**
5. **Display (visible when unit is ON)** – Top Line: Book; Second Line: Book and Chapter; Third Line: Volume Level (0-31), Chapter Progress Indicator and Battery Level Indicator.  
*NOTE: Book and chapter may not be visible at all times. Listen for description.*
6. **Power Button** – To turn ON, press this button and hold for 2-3 seconds. The green light will go on. To turn OFF, press this button and hold for 2-3 seconds. The sound will first go off, and then the green light will go out.
7. **Play/Pause Button** – Tap to PAUSE the unit. Tap it again to continue playing. If the unit is paused for 30 minutes, the unit will automatically power OFF.
8. **Book Button** – Tap to move forward or backward by Book. Press and hold to continuously move forward or backward by Book.
9. **Chapter Button** – Tap to move forward or backward by Chapter.
10. **Scroll Button** – Press and hold down to move forward or backward within the Chapter.
11. **Volume Button** – Increase the volume by pressing (+); decrease the volume by pressing (-).
12. **Audio Output** – Use this 3.5mm jack to connect external audio equipment (earphones, PA system, amplifier). When this jack is connected, the speaker automatically turns off.

1. **AC/DC Power Jack** – AC/DC charger is plugged into this jack to charge the battery from an AC Source.
2. **Hand Crank** – Turn (either direction) to hand charge the battery.
3. **Solar Panel** – Lift towards sun to charge the battery from sunlight. The solar panel should be adjusted to receive direct sunlight without obstacles or shadows.

PRO.INST-ENG.

**Faith Comes By Hearing**