

Vista SP : Quick Start Directions

Only remove projector from the bag. It is NOT necessary to remove DVD player or battery.

{Power}



1. Connect "Battery Power" cable to Power Plant Battery.



2. Check that Engine power is OFF ("O" is down). Connect "Power In" end of Battery Cable to Engine.



3. Turn power ON ("--" is down). Red power light will come on.

{Video}



4. Remove projector from bag. Connect "Power Out" end of the Projector DC Cable to Engine.



5. Connect blue "Projector DC In" end of cable to projector.



6. Connect yellow "AV Out" end of the Projector AV Cable to Engine.



7. Connect yellow "Projector AV In" end of cable to projector.

{Audio}



8. Connect Speaker Cable to one of the speaker ports by first aligning the indent on the plastic tip.



9. Connect the other end of Speaker Cable to port on back of speaker.


Vista should be laid horizontally as shown below for DVD to operate.

Move and adjust projector and speakers as needed.



- o Remove any disc before inserting a DVD.
- o Only remove projector from the bag. It is NOT necessary to remove DVD player or Power Plant battery.
- o See projector and DVD player directions on back.

Solar Charging

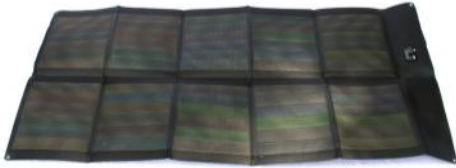

1. Lay Solar Panel where it will receive direct sunlight.



2. Connect "Solar Panel" cable to Solar Panel.




3. Connect "Battery" end of Solar Cable to the battery.



4. If possible, place battery indoors or in a bag to protect it from sun and rain.

Battery charges completely in one full day of sun. When all battery lights are lit, the battery is 90-100% full.

Battery will slowly lose charge when not used for a prolonged period of time.



Press battery button to check charge level.

AC Charging



1. Connect AC Charger to wall socket and to battery. Charger's LED is red during charging and green when battery is full.

Once battery is full you can "top off" the battery to gain a few more minutes of run time by unplugging the charger from the wall and plugging it in again.

Running from AC



1. Connect AC Adapter to wall socket and **directly to Vista Engine's Power In.**

DVD Player Directions



1. With Vista Engine ON, press Power button on DVD player.



2. Insert DVD after ejecting any other discs.




3. Adjust volume on Engine as needed.

Projector Directions



1. Press projector's Power button.

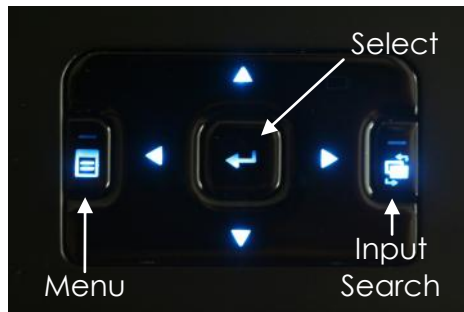

2. If video does not appear, press Input Search on right.



3. Adjust the focus ring to create a sharp picture.

Wired Microphone Directions



1. Connect microphone cable to Engine's MIC1 or MIC2 port



2. Connect other end of microphone cable to microphone.




3. Turn knob to left of port to adjust microphone volume.

Vista SP : Parts List

Please note that some Vista Systems have been customized and may have varying components. Remember, it is ONLY necessary to remove the projector and cables from the bag to show a presentation.



Vista SP : Packing Hints

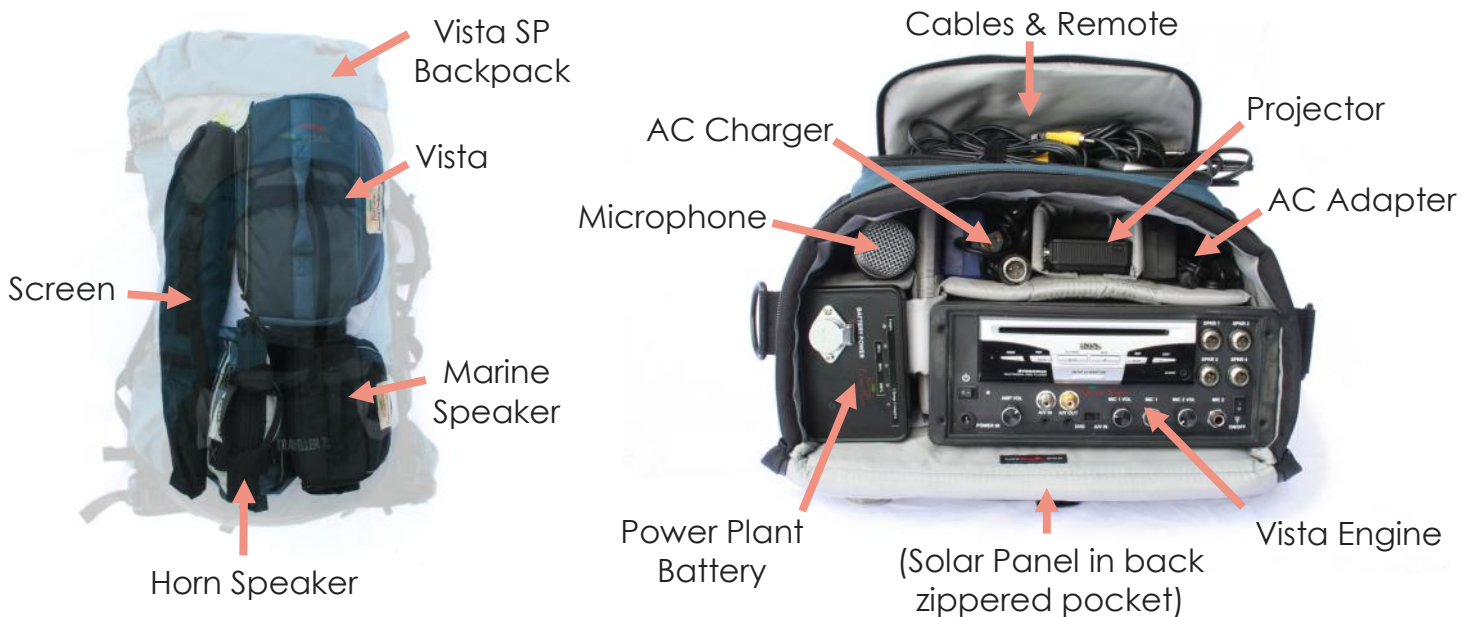

90" Screen Assembly



1. Lay screen with logo at bottom.



2. Snap together 1st 2 poles (metal end) of 5-pole set.



3. Feed the 1st pole into 1st opening to left of logo.



4. Slide pole assembly through first 4 sleeves on left side.



5. Catch metal end of pole assembly inside 4th sleeve.



6. Feed rest of 5-pole set through the left side's sleeves, snapping the poles together as you go.



7. Catch rubber end of pole assembly inside 1st sleeve.



8. Move to top of screen. Snap together 1st 2 poles (metal end) of 6-pole set.



9. Feed the 1st pole into 1st sleeve to your left, starting at screen's top.



10. Feed assembly through sleeves, catching ends inside 1st and last sleeve as before.



11. Release from sleeves and connect pole assemblies at top and bottom of screen.



Screen material may be machine washed in cold water and line dried.